


Photocopy at 100%

Note to professional copying services. You may make up to ten copies of these patterns for the personal use of the buyer of this magazine.

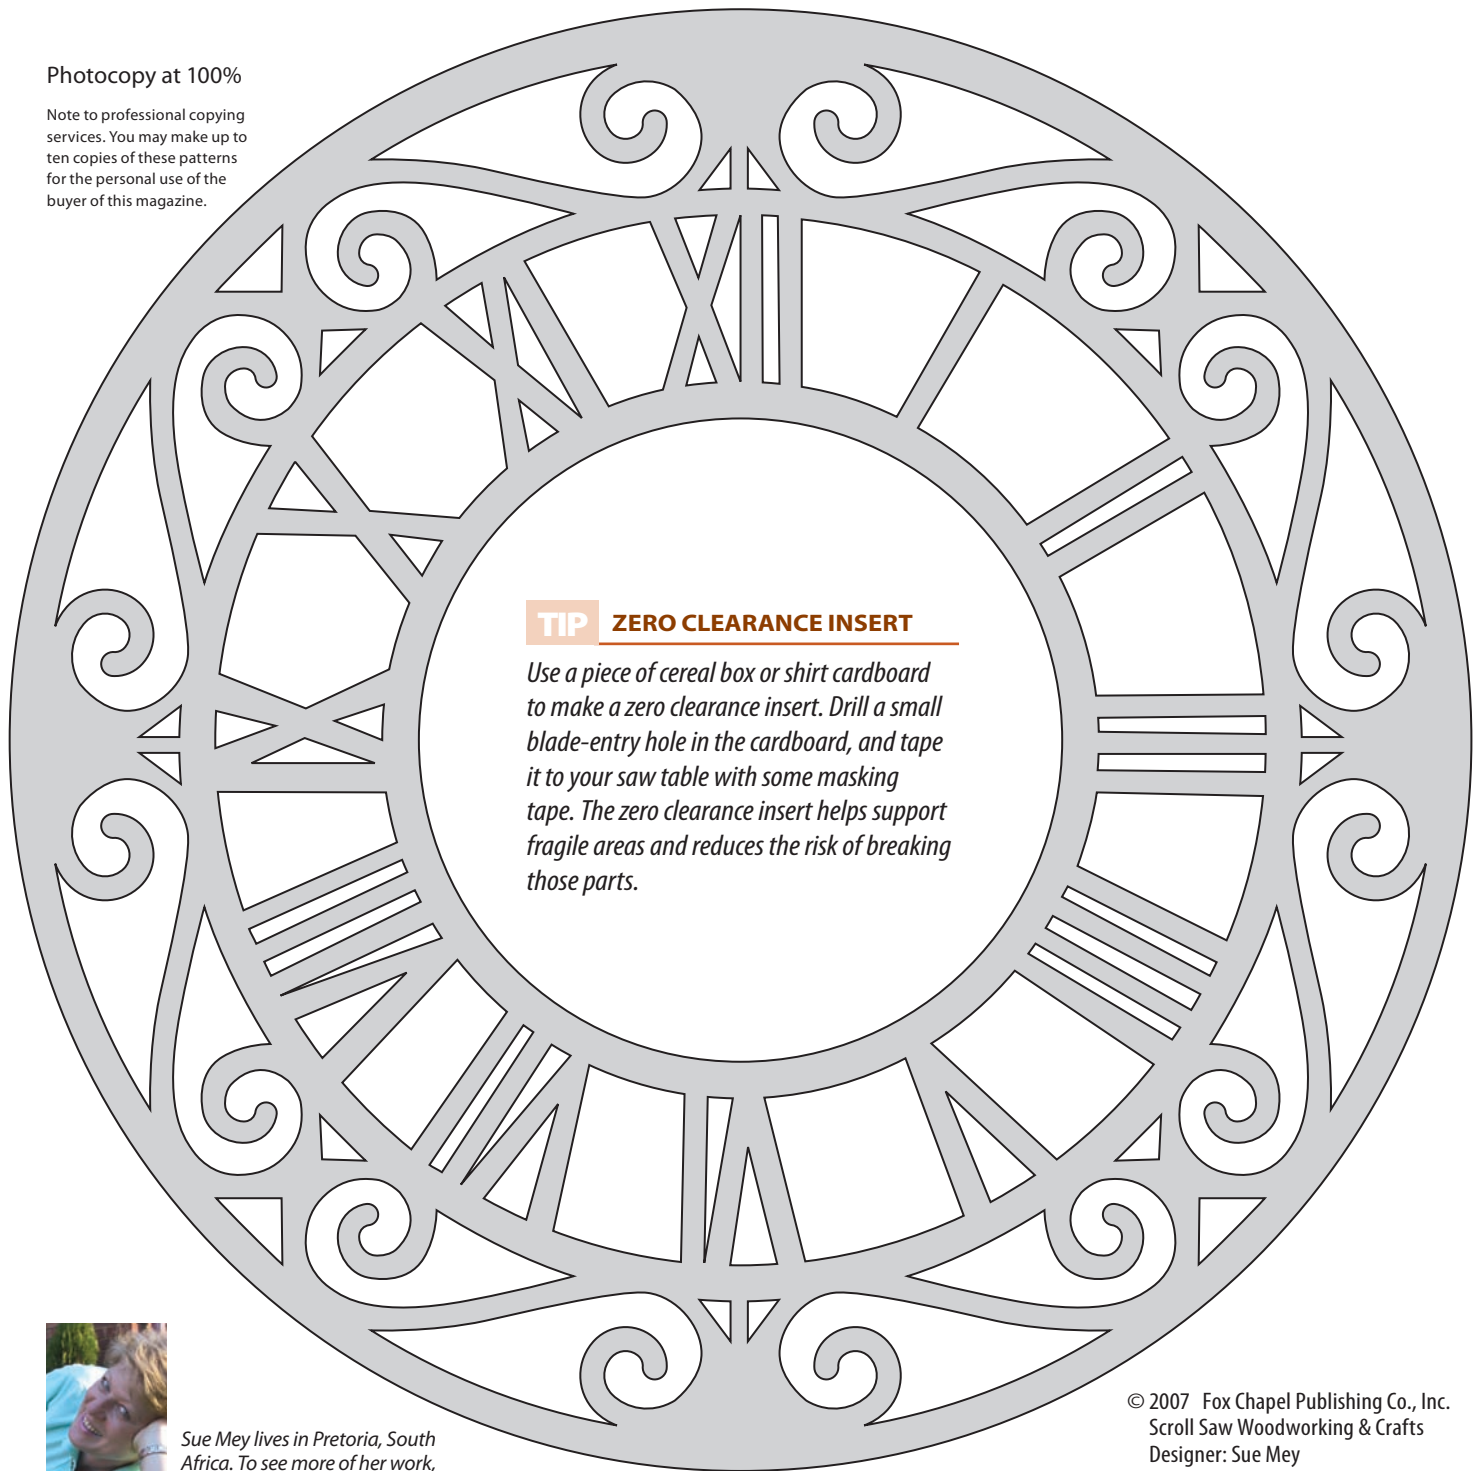

TIP ZERO CLEARANCE INSERT

Use a piece of cereal box or shirt cardboard to make a zero clearance insert. Drill a small blade-entry hole in the cardboard, and tape it to your saw table with some masking tape. The zero clearance insert helps support fragile areas and reduces the risk of breaking those parts.



Sue Mey lives in Pretoria, South Africa. To see more of her work, visit www.geocities.com/meydenhart.

© 2007 Fox Chapel Publishing Co., Inc.
Scroll Saw Woodworking & Crafts
Designer: Sue Mey

Materials:

- 1" x 9" x 9" light colored hardwood of choice (backing)
- 1/8" x 8" x 8" Baltic birch plywood or hardwood of choice (overlay)
- Masking tape
- Spray adhesive
- Thin, double-sided tape (optional)
- Sandpaper – assorted grits
- Wood stain – walnut (optional)
- Deep-penetrating furniture wax liquid or Danish oil
- Lint-free cloth
- Wood glue
- Clear spray varnish
- Saw-tooth hanger
- Quartz movement and hands

Tools:

- 3 and #9 reverse-tooth blades or blades of choice
- Drill press with 1/16", 1/8" and 5/16"-diameter bits (size of the larger bit may vary to match the shaft diameter of quartz movement)
- Disc sander and palm sander
- Router with round-over bit

Materials & Tools

- Punch and mallet
- Sharp pencil
- Clamps, assorted sizes
- Assorted paint brushes of choice to apply the finish

Free Pattern Download
of FRETWORK OVERLAY CLOCK at
www.ScrollSawer.com

