


Photocopy at 100% or desired size.

Note to professional copying services. You may make up to ten copies of these patterns for the personal use of the buyer of this magazine.

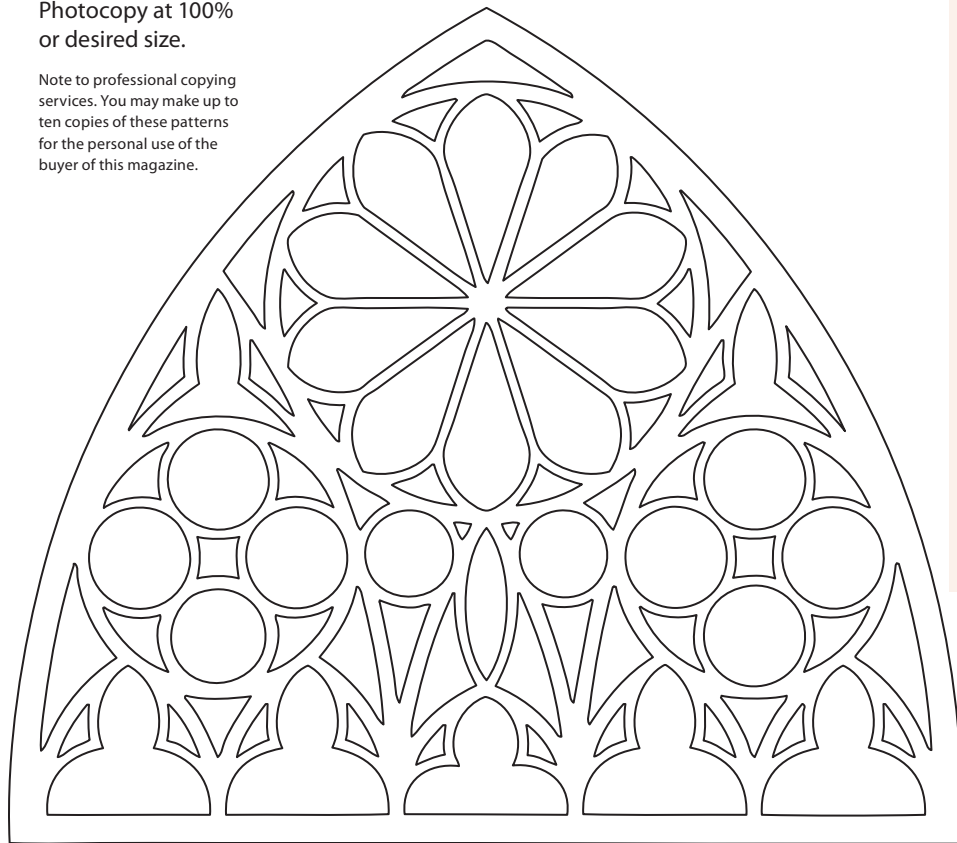

Materials & Tools

Materials:

- ¼" x 5" x 5" hardwood or Baltic birch plywood (each ornament)
- Spray lacquer or finish of choice

Tools:

- #1 reverse-tooth blades or blades of choice
- Drill with ¼"-diameter drill bit

SPECIAL SOURCES:

Bruce's passion for Gothic window tracery has produced an abundance of ornate designs. To receive 10 additional original designs, send \$5 (U.S. funds) to: Historic Window Tracery Designs, *Scroll Saw Woodworking & Crafts*, 1970 Broad St., East Petersburg, PA 17520.

